UhOh! You serged with pins too close to the edge and broke your serger's knives.

How to replace the knives https://youtu.be/bqFP5eJ9yDE

For the 1034D model

You can buy a set on Amazon fairly inexpensively, around **\$6.00** USD.

https://www.amazon.com/Serger-Brother-Viking-XB0563001-X77683001/dp/B00V9X4DF0

For the 1034DX model

The upper knife blade is a different part Karen Wood reports you will need the proper upper knife part# XB1687001

Call Ken's Sewing Center or SewingPartsOnline for the replacement knives if you cannot find the correct ones on Amazon.



serger

sewing machine