

## Presser Foot Pressure Adjust on Brother 1034d Serger

First: Get a Sharpie or other Permanent marker, or colored nail polish.

Before adjusting the tension from your usual setting,

make a “matchup mark” both the Silver KNOB at the top of the serger

on the left side in line with the presser foot bar and the actual top of the serger

with a line or a dot on both - so you can get the setting back to where it was originally.

Turning to the Right = Tightens pressure

Turning to the Left = Loosens pressure

Only a slight turn of the knob can make a significant adjustment

This is why marking both the knob and the top of the serger is really important.